



- Clockwise and counter-clockwise operation
- Set the desired torque first. After reaching the desired torque, set the angle and turn the wrench at this angle to apply extra torque
- Unit: N.m, in.lb, ft.lb, kg.cm, degree
- Peak and track working mode
- Target torque or angle value can be set, with audible and visible alarm:
 - Green LED light on and buzzer sounds when torque or angle value is 80%~100% of target torque or angle
 - Both green and red LED light on and buzzer sounds when target torque or angle value is reached
- Power off in 2 minutes automatically
- Memory 50 measurement values for browsing
- With overload record (once the torque reaches 110% of the maximum range)





IST-5W135A

SPECIFICATION

o. Edit 107.11011						
Code		IST-5W30A	IST-5W135A	IST-5W200A	IST-5W340A	
Range	torque	6~30N.m	27~135N.m	40~200N.m	68~340N.m	
	angle	0~999°				
Accuracy	clockwise	±3%				
	counter-clockwise	±4%				
	angle	±2° (rotate at 90°)				
Resolution	torque	0.01N.m	0.1N.m	0.1N.m	0.1N.m	
	angle	1°				
Square driver (L)		1/4"	3/8"	1/2"	1/2"	
Power supply		2xAAA batteries				
Length		Ø85×60mm	Ø85×75mm	Ø85×80mm	Ø85×80mm	
Weight		150g	220g	240g	240g	



working with mechanical wrenches

OPTIONAL ACCESSORY

Calibration cable	IST-SD-CABLE
-------------------	--------------