


FLAT BACKS



7330-F2

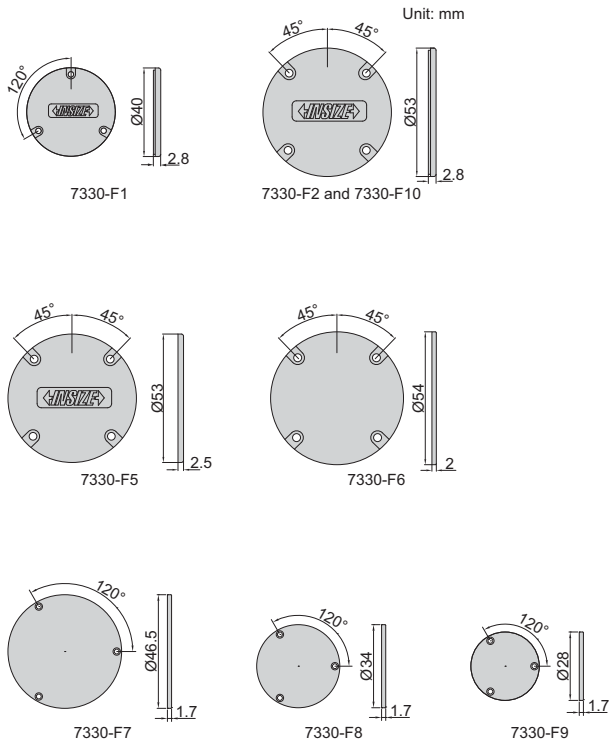


7330-F8

Code	For digital/dial indicators	
7330-F1	2311	
	2301	
	2302	
	2308	
	2309 (except 2309-30, 2309-30F)	
	2313	
	2314	
	2316	
	2801	
	2103	
7330-F2	2104	
	2108	
	2109	
	2112	
	2113	
	7330-F5	2103
		2104
		2108
		2109
		2112
2113		

Code	For digital/dial indicators
7330-F5	2115
	2116
	2118
7330-F6	2318
	2830
7330-F7	2882
	2885
	2888
	2889
	2891
	2892
7330-F8	2890
7330-F9	2887
7330-F10	2886
	2310

LUG BACKS

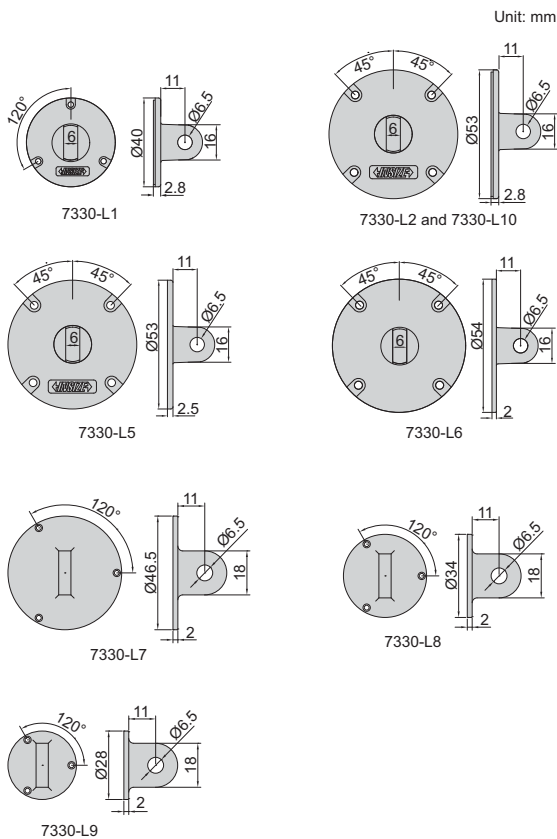

7330-L2



7330-L8

Code	For digital/dial indicators	
7330-L1	2311	
	2301	
	2302	
	2308	
	2309 (except 2309-30, 2309-30F)	
	2313	
	2314	
	2316	
	2801	
	2103	
7330-L2	2104	
	2108	
	2109	
	2112	
	2113	
	7330-L5	2103
		2104
		2108
		2109
		2112
2113		

Code	For digital/dial indicators
7330-L5	2115
	2116
	2117
7330-L6	2118
	2318
7330-L7	2830
	2882
	2885
	2888
	2889
	2891
2892	
7330-L8	2890
7330-L9	2887
7330-L10	2886
	2310